



II. ADJUSTMENT PROCEDURE

Tailgate & Closing System




STANDARD CANOPY



- TAILGATE & CLOSING SYSTEM -

All our products come with a standard setting suitable for most vehicles. These settings may be affected by the conditions of transport and storage of the product, Some checks and adjustments are necessary to adjust your Canopy

3 POINTS OF SETTINGS

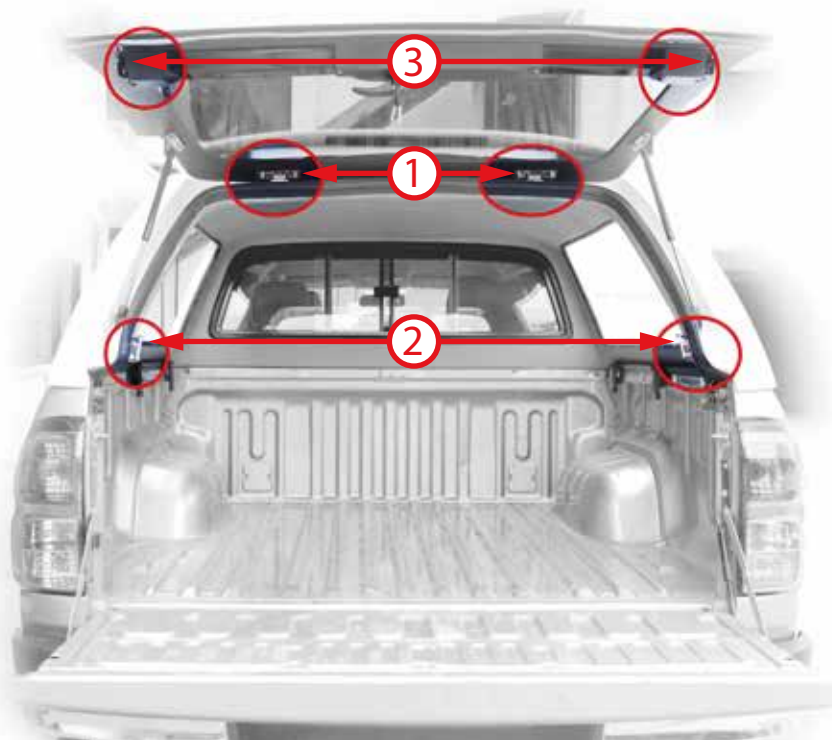

① HINGES



② HOOK



③ LOCK SYSTEM



- IS IT NECESSARY TO ADJUST? -


The standard setting fits most vehicles, it may not be necessary for your Canopy, **but checking and tightening screws and bolts is essential.**



① The space between Hatchback and Canopy must be identical on each side




② A space is needed at the top of the tailgate between the glass and the Hard Top

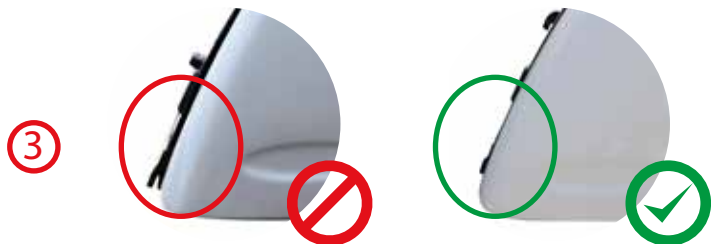

③ The tailgate and Hard-Top profile must be perfectly aligned

CHECKING THE SETTINGS

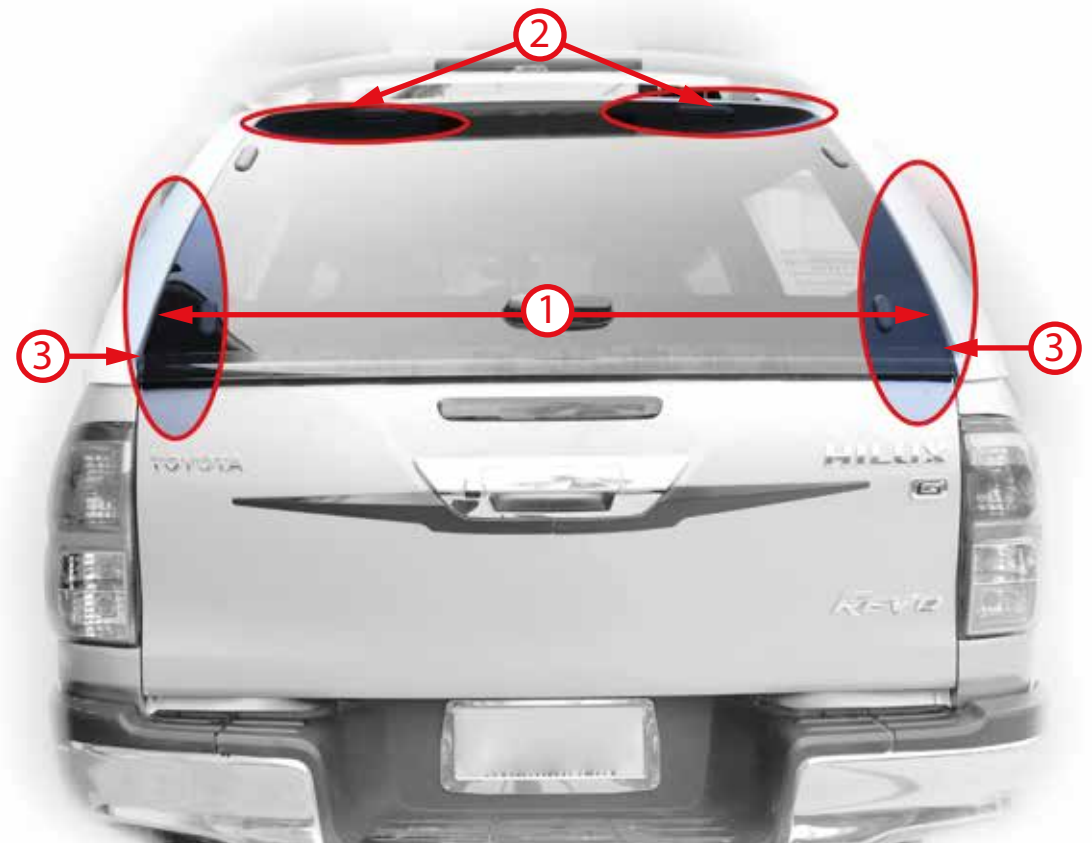

II. 1 - ADJUSTMENTS

- BEFORE MAKING ADJUSTMENTS -

It is necessary to disassemble the gas struts before making the adjustments and place them in the Canopy water channel.

DISASSEMBLY OF GAS STRUT



UNCLIP RING CYLINDER
WITH A FLAT SCREWDRIVER



PULL THE GAS STRUT



REMOVE THE GAS STRUT IN
THE CANOPY'S WATER CHANNEL



- 1 HINGE ADJUSTMENT -

The hinge settings allow you to adjust the horizontal placement as well as the height and depth of the liftgate

HORIZONTAL & DEPTH ADJUSTMENT



LEFT/RIGHT ADJUSTMENT

DEPTH ADJUSTMENT



ADDITIONAL ADJUSTMENT



You can also adjust the attachment hinges if the setting is not enough



The space between Hatchback and Canopy must be identical on each side




A space is needed at the top of the tailgate between the glass and the Canopy

- 2 STRIKE ADJUSTMENT -


The adjustment of the hook will allow you to align the window to the profile of the Canopy or to facilitate the locking of the closing system.

FRONT / REAR ADJUSTMENT OF THE STRIKE

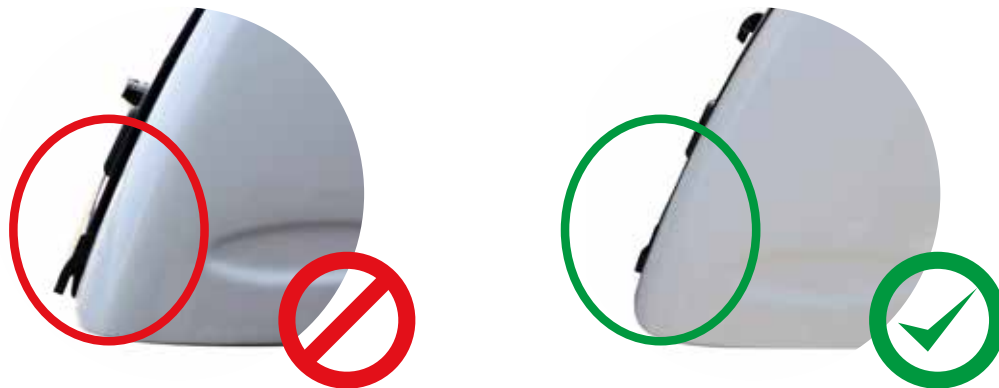

The tailgate and Canopy profile must be perfectly aligned

ADJUSTS ALIGNMENT
AND CLOSING THE HATCH

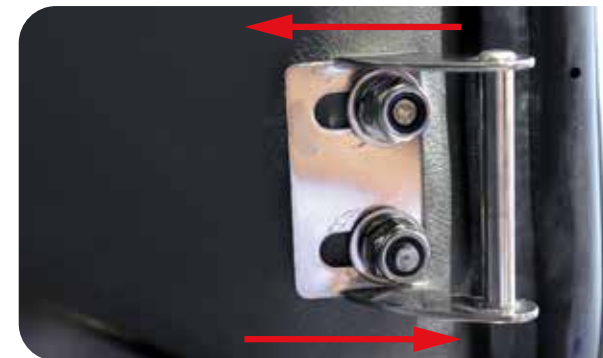

TIP : Adjust from inside, hatch closed

- 3 LOCKING SYSTEM ADJUSTMENT -

The tailgate is locked on each side by a 3-position locking system, if the adjustments do not allow easy opening or closing of the tailgate, adjustment of the closing system may be necessary.

CLOSURE SYSTEM 3 POSITIONS



①



②



③

ADJUST THE SYSTEM CLOSURE OF THE HATCH



Remove the plastic cover



Adjust the latch position



TIP : Adjust from inside, hatch closed

LOCKING SYSTEM



ADDITIONAL ADJUSTMENT



Disassemble the central cover to access the linkage



With the adjustment system you can enlarge or reduce the rod by a crank movement

II. 1 - ADJUSTMENTS

- VERIFICATION & TIGHTENING -

After making and checking the settings, it is imperative to tighten ALL the nuts of your Canopy.



THE FOLLOWING ITEMS NEED TO BE ATTENDED TO ON A REGULAR BASIS. MORE FREQUENT SERVICE IN SEVERE OFF ROAD CONDITIONS

- ① - Ensure mounting bolts always remain tight.
- ② - Check regularly that screws holding windows and doors are tight.
- ③ - Lubricate lock and keys recess on rear door.
- ④ - Abrasive components are not recommended for polishing surfaces or painted products :
USE ONLY WASH POLISH IF REQUIRED.
- ⑤ - Clean door rubbers on canopy tailgate assembly and lightly coat with silicone spray.
- ⑥ - Locking system should be lubricated regularly and lock covers used for weather protection.
- ⑦ - Canopy Rack : maximum load carrying capacity is recommended at 80kg over both bars.

SJS PRO PRODUCTS CO LTD PRIDES ITSELF ON THE QUALITY OF THEIR RANGE OF PRODUCTS AND CUSTOMER SERVICE EXCELLENCE. ANY PRODUCT SUBJECT TO CLAIM MUST BE RETURNED TO AUTHORISED WARRANTY AGENT OR TO SJS PRO PRODUCTS CO. LTD. IN THAILAND.