



ASSEMBLY INSTRUCTIONS

CANOPY, BACKLIGHT & OEM CENTRAL LOCKING











I. FITTING



II. MAINTENANCE



III. WARRANTY CARD

LIFETIME SHELL STRUCTURAL WARRANTY FOR THE ORIGINAL VEHICLE OWNER +2 YEARS WARRANTY ON MOVING PARTS.








I.1 - FITTMENT



- UNPACKING AND FITTING -


① - Unpack the Canopy, do not use sharp like aids, for example knife or cutter.

- 2 Remove the product from the box and check your fitting kit.
- * If your cargo bed is not everywhere at the same level, equalize it with the foam rubber sealing strip supplied.
 ③ Place the Canopy on the cargo bed and position aline the A, B, C, points.

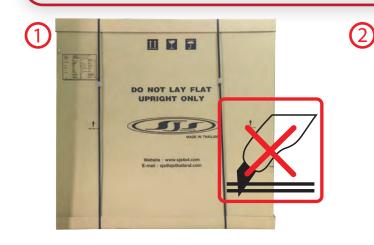





CANOPY FITTING KIT RUBBER SEALING TAPE + CLAMPS (6 for Double Cab - 8 for Standard Cab)

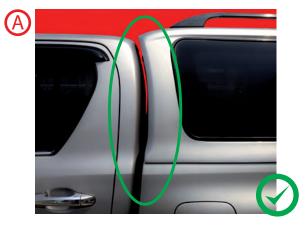



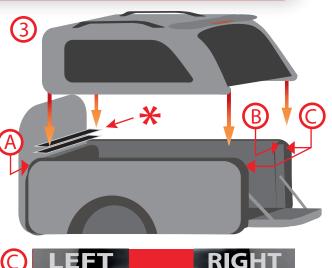

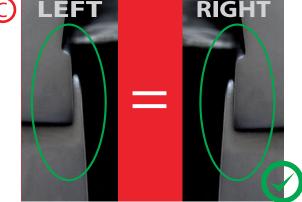




I.1 - FITTMENT



- CLAMPS FIXATION -

- 1 Unscrew the Clamps to maximum opening.
- 2 Install the upper part behind the rim of the canopy.
- ③- Screw up to position the lower hook behind the edge of the bed.



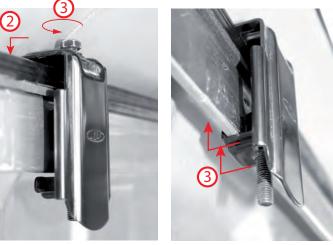

INSTALL THE CLAMPS IN THE FOLLOWING ORDER

The canopy will compress to the foam rubber and moves down to the car body a little bit. Avoid heavy force like emergency break in this time. It is indispensable to check and tighten the clamps 24H. after the installation the car bed to the car be be bed to the car be bed to the ca




I.2 - WIRING BRAKE LIGHT



- CONNECT TO CAR REAR LIGHT -

L DISCONNECT THE BATTERY FROM THE VEHICLE BEFORE ACCESSING THE CONNECTIONS

- Identify the connections of your Canopy.
- 2 Remove the rear light on the side of the Canopy connections.
- ③ Identify the connection of the Brake light. (refer to your vehicle handbook)
- ④ Pass the cables from the Canopy to the rear light through the hole at the corner of the pickup bed.
- 5 Using pliers to connect the canopy on the rear light with the connection clamps.
- 6 Reconnect the battery to test the connection. DISCONNECT THE BATTERY BEFORE REFITTING THE REAR LIGHT.

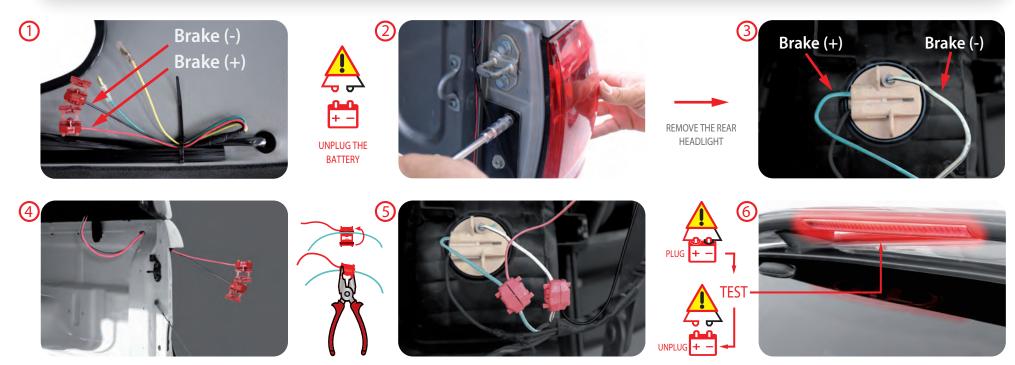

ESJS PROPRODUCTS **I.3 - WIRING CENTRAL LOCKING ESJS** PROPRODUCTS



- CONNECT LOCK & UNLOCK CABLES -

DISCONNECT THE BATTERY FROM THE VEHICLE BEFORE ACCESSING THE CONNECTIONS

- 1 Identify the connections on your Canopy.
- 2 Remove the rear light on the side of the Canopy connections.
- 3 Identify the connection point for your vehicle to reach central locking cables. (contact us if needed)
- 4 Pass the extension cables from your car connection point and the canopy cables, to the rear light.
- 5 Using pliers to connect the extension on Lock System with the connection clamps / PLug Canopy to extension.
- 6 Reconnect the battery to test the connection. DISCONNECT THE BATTERY BEFORE REFITTING THE REAR LIGHT.

